

# **DEEP ROOF LIGHTING**

## Triac dimming fixtures back up to 60W AC wiring, Also for no-dimm fixtures









- UL Listed for damp locations.
- Emergency Driver output connect to AC input of LED Lights
- Manual test.
- Built-in high power AC relay to control normal led driver operation.
- Used with Lithium iron phosphate battery.
- Over-discharging protection
- Rest mode
- -90 minutes emergency time.
- Battery pack with built-in charging and discharging protection
- Ambient range ta 0... 60°C
- -Suitable for lights up 60W



#### Ordering data

LMDP-ST4AC-170P

AC100-277V,S0/60Hz, 80mA SW max

DC 170V max,2SmA max 4W constant power

Emergency >1.Shours charge >24hours

LiFePO4 6.4V I.6Ah,10.24Wh IFR186S0x2 pcs,2slp

LMDP-ST8AC-170P

80mA 5W max

AC100-277V,50/60Hz, DC 170V max,S0mA max 8W constant power

Emergency >1.Shours charge >24hours

LiFePO4 6.4V 3.2Ah,20.48Wh IFR186S0x4 pcs,2s2p

#### Application:

LMDP-ST4AC Triac dimming lights < 40W, No-dimm lights < 4W LMDP-ST8SC Triac dimming lights < 60W, No-dimm lights < 8W

### **CAUTION:**

#### - DO NOT USE OUTDOORS.

- DO NOT MOUNT NEAR GAS OR ELECTRONIC HEATERS.
- EQUIPMENT SHOULD BE MOUNTED IN LOCATIONS AND AT HEIGHTS WHERE IT WILL NOT BE SUBJECTED TO TAMPERING BY UNAUTHORIZED PERSONNEL.
- THE USE OF ACCESSORY EQUIPMENT NOT RECOMMENDED BY THE MANUFACTURER MAY CAUSE AN UNSAFE CONDITION.
- DO NOT USE THIS EQUIPMENT FOR OTHER THAN ITS INTENDED USE.
- Use with grounded, UL Listed, damp location rated fixtures and case should be grounding.
- The equipment is intended for ordinary locations and for permanent installation into one or more Listed emergency luminaires.

#### **Protections:**

- Input over current protection.
- Output over voltage protection.
- Output under current protection.
- Output short circtit protecton.

#### **Test switch**


- Emergency conversion Kit will go into emergency mode if test switch is pressed when main supply is on, while it will go into charging mode if test switch is not pressed.

In emergency mode, press the test switch for 3 seconds to turn off the current emergency state.


#### **LED** indicator


- Red stable: charging mode or charging full.
- Red off: main power off or discharging mode.

#### **Dimensions**

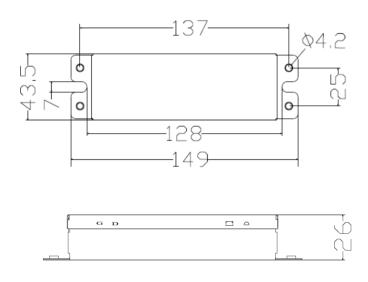

Emergency driver 149×43.5×26mm

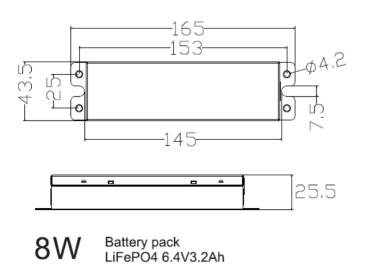


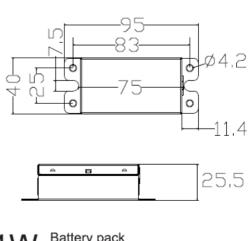

#### Installation instruction:

- Please install this product properly by the licensed electrician.
- Please check and confirm all the data and usage surrounding before installation.
- Damp or wet location installation is OK
- This item could be used in the sealed fixtures or installed open area of the fixtures.
- Please keep it away from the flammable materials with a place of good heat dissipation.
- Please charge the battery consistently for >24 hours for the first time usage so as to activate the whole battery cells of discharging/charging duration.

#### Wiring diagram

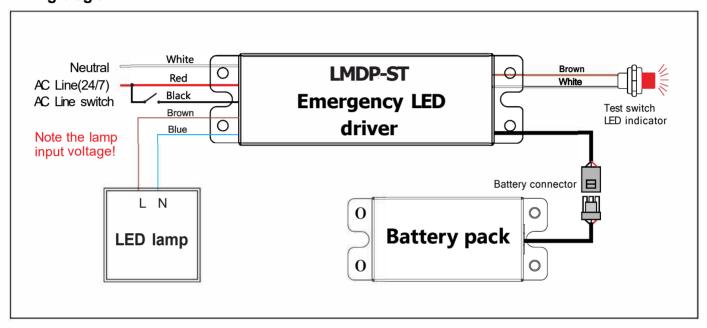

#### Maintenance:

- Please turn off the main power every 3 months, so as to let the battery operate a charging/discharging circle. This will help make battery sustain a longer lifetime.
- Please check the emergency function with the push test button.
- Battery capacity is >60% when factory deliver goods, so it could be consistently stocked for Max 12 months.

#### Notes:

Users are not suggested replacing the batteries by themselves. If needed, please use the nominated batteries pack by the manufacturer and contact with us for the instructions of maintenance.

#### Warranty

- Warranty 5 years.
- Except for the following circumstances:
  - 1) Improper installation or operation.
  - 2) Misuse.
  - 3) Abuse.
  - 4) Unauthorized or improper repair alteration.
  - 5) Accident or negligence in use, storage, transportation.
  - 6) Any natural acts.